

ROCKVILLE | **ROCKFORCE 384**

QUICK START GUIDE

The ROCKFORCE 384 is an easy to use, powerful and intelligent DMX controller. It features 384 DMX channels, 30 banks, 8 programable scenes, 6 user set chases, and can control 24 intelligent lights on up to 16 channels.

Connections

1. MIDI input
2. DMX outputs
3. 9V DC Power input
4. USB power port for lamp. Can also be used to power any MIDI controller with a USB power option.
5. Power switch



Creating a Scene

1. Press the PROGRAM button. The PROGRAM LED indicator on the LCD read out will flash repeatedly.

2. Press the MIDI/ADD button.



3. Press the button corresponding to the scene you would like to add. To add more scenes repeat steps 1 – 3.



Recording a Chase

1. Press the MIDI/ADD button.



2. Select your CHASE.



3. Select your SCENE.



4. Press the MIDI/ADD button.



To add more scenes, simply press the desired scene button and then press the MIDI/ADD button.

Running a Chase

1. Press the desired CHASE button.



2. Press the AUTO button.



3. Adjust FADERS for speed and fade time.



4. Press the AUTO button to run the chase.

